



DESIGN <i>[Signature]</i>	DRAWN BY <i>CP</i>	<b>DART AEROSPACE LTD</b> HAWKESBURY, ONTARIO, CANADA	
CHECKED <i>[Signature]</i>	APPROVED <i>[Signature]</i>	DRAWING NO. DSI 9263	REV. A SHEET 1 OF 1
DATE 03.06.25		TITLE SPACER BLOCK KIT	SCALE NTS
A	03.06.25	NEW ISSUE	


## **DART SERVICE INSTRUCTION**

**TO AMEND INSTALLATION INSTRUCTIONS IIN-D206-667 REV. A or B**

REF. CANADIAN STC: SH01-5

FAA STC: SR01304NY

WHEN CONVERTING A 206 A/B AIRCRAFT FROM LOW TO HIGH GEAR BY INSTALLING D206-681-011 LANDING GEAR, THE D206-667-011 SPACER BLOCK KIT (OR EQUIVALENT) MUST BE INSTALLED BETWEEN THE FUSELAGE AND FWD CROSSTUBE FITTINGS BEFORE INSTALLING THE LANDING GEAR ON THE AIRCRAFT.

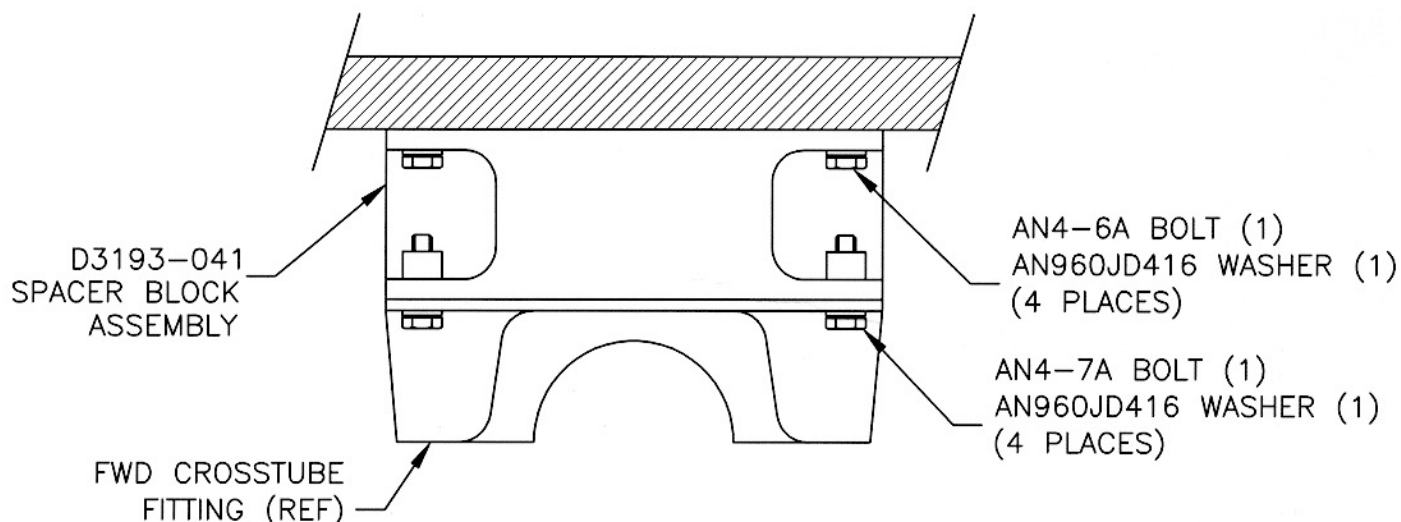

QTY -011	Part Number	Description
X	D206-667-011	SPACER BLOCK KIT
8	AN4-6A	BOLT
8	AN4-7A	BOLT
16	AN960JD416	WASHER
2	*D3193-041	SPACER BLOCK ASSEMBLY

\* OR AA P/N 206-321-005 OR BHT P/N 206-031-586-003

CANADA  
DEPARTMENT OF TRANSPORT  
AIRCRAFT CERTIFICATION  
BRANCH  
DAO # 01-O-01

**APPROVED**

BY: *[Signature]*  
D. SHEPHERD (DE # 02)

DATE: 03.06.09  
CERT. NO.: SH01-05  
ISSUE NO.: 1/2

Copyright © 2003 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.